


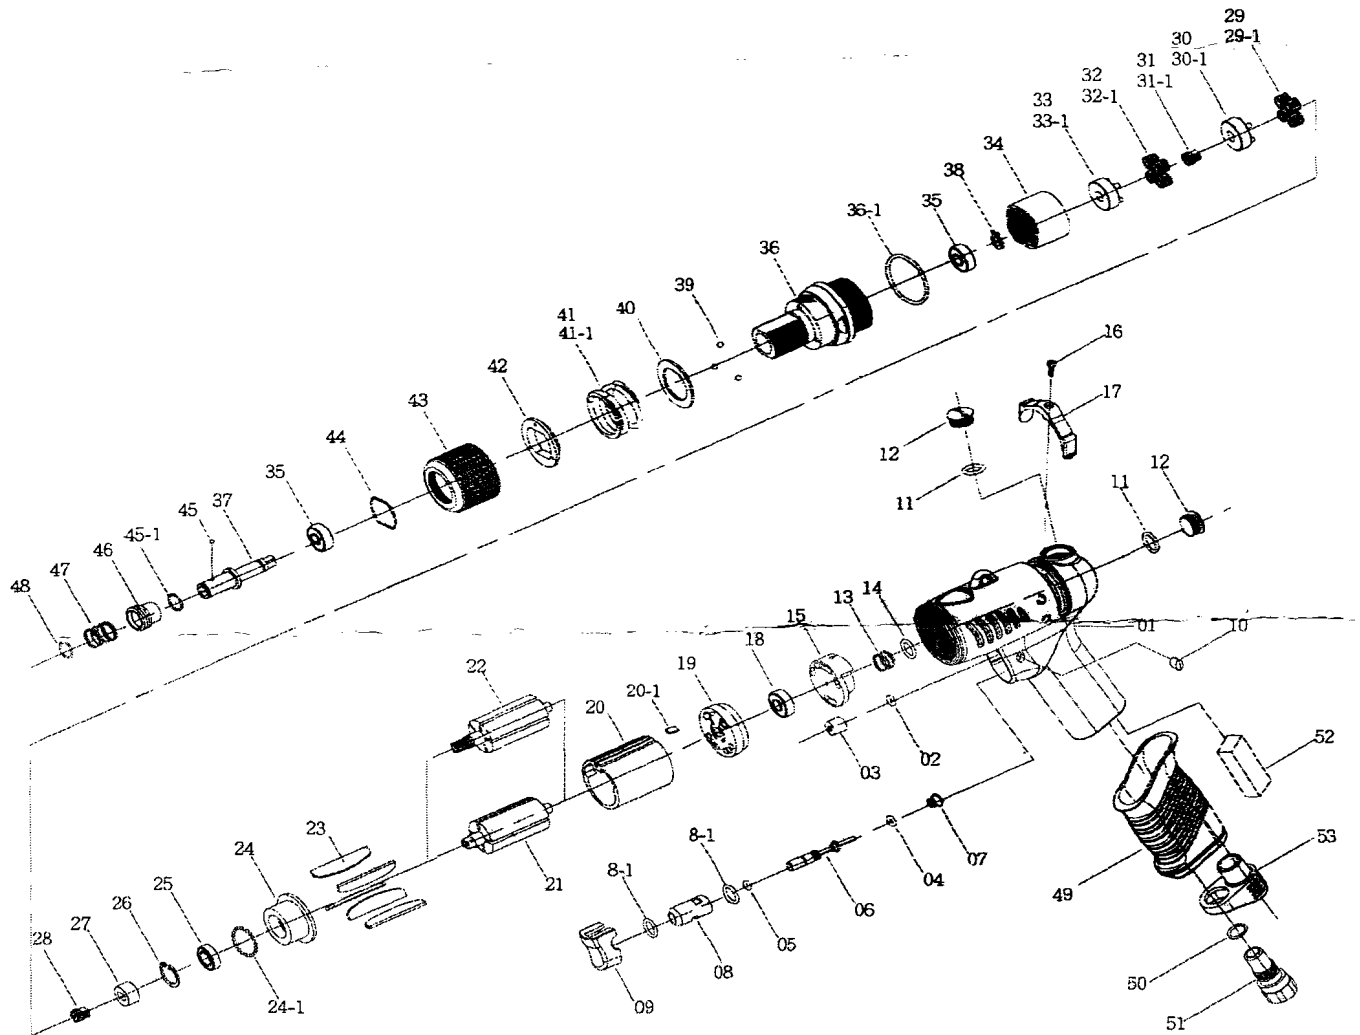



SD317COM SD3750COM REVERSIBLE SCREWDRIVER

Wespro Pneumatic Tools





No.	Description	Order Code	Q'ty	No.	Description	Order Code	Q'ty
1	Pistol Housing	225834	1	29-1	First Planet Gear [SD3750COM]	225876	4
2	O Ring (5x1)	225835	1	30	First Gear Cage [SD317COM]	225877	1
3	Blank Cap	225836	1	30-1	First Gear Cage [SD3750COM]	225878	1
4	O Ring (3.5x2)	225837	1	31	Second Main Gear [SD317COM]	225908	1
5	Valve O-Ring (3x1.5)	225838	1	31-1	Second Main Gear [SD3750COM]	225909	1
6	Valve Pin	225839	1	32	Second Planet Gear [SD317COM]	225910	7
7	Cone Spring (0.45)	225840	1	32-1	Second Planet Gear [SD3750COM]	225911	4
8	Valve Bushing	225841	1	33	Second Gear Cage [SD317COM]	225912	1
8-1	O Ring (8x1)	225842	2	33-1	Second Gear Cage [SD3750COM]	225913	1
9	Trigger	225843	1	34	Internal Gear	225914	1
10	Cap	225844	2	35	Ball Bearing (688ZZ)	141851	2
11	O Ring (P10)	225955	2	36	Clutch Housing (left hand thread)	225915	1
12	Screw Cap	225845	2	36-1	O Ring (23x2)	225916	1
13	Spring (1.1)	225846	1	37	Anvil (6.35Hex)	225917	1
14	Valve O-Ring	225847	1	38	C Ring	225918	1
15	Reverse Valve	225848	1	39	Ball (4.0)	225919	3
16	Set Screw (M2.6x12) and Washer	225849	1	40	Washer	225920	1
17	Reverse Lever	225862	1	41	Torque Spring (4.5)[SD317COM]	225921	1
18	Ball Bearing (606ZZ)	112036	1	41-1	Torque Spring (5.0) [SD3750COM]	225922	1
19	End Plate	225863	1	42	Regulation Washer	225923	1
20	Cylinder	225865	1	43	Torque Ring	225925	1
20-1	Key	225866	1	44	C Ring	225926	1
21	Rotor [SD317COM]	225867	1	45	Ball (2.38)	225927	1
22	Rotor [SD3750COM]	225868	1	46	Spring (0.6)	225928	1
23	Rotor Blade	225869	6	47	Bit Slide Sleeve	225929	1
24	Front Plate	225870	1	48	C Ring	225933	1
24-1	Ball (2.0)	225871	36	49	Pistol Cover	225935	1
25	Ball Bearing (688ZZ)	141851	1	50	O Ring (P10)	225955	1
26	C Ring [SD3750COM]	225872	1	51	Air Inlet Bushing (NPT)	225936	1
27	Connect [SD317COM]	225873	1	52	Filter	225937	1
28	First Main Gear [SD317COM]	225874	1	53	Silencer	225938	1
29	First Planet Gear [SD317COM]	225875	7				

How to operate Direction

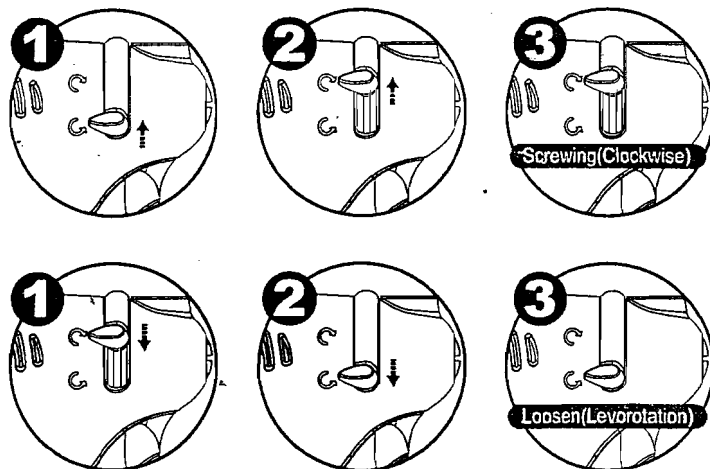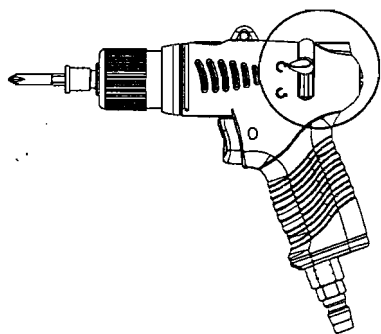

How to replace the bit

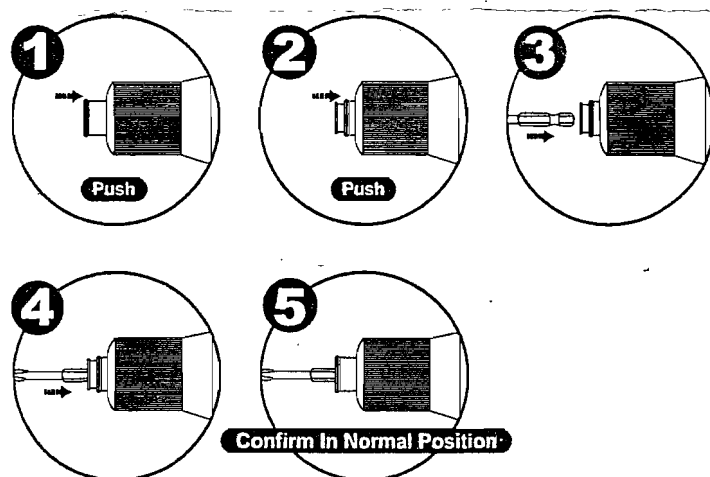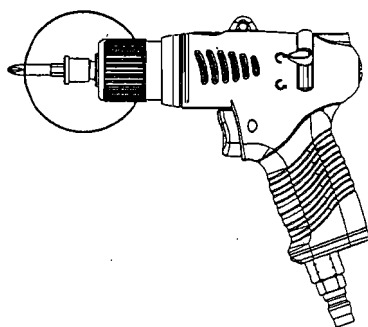

How to adjust the Torque

